

CSB4-U

USB driver installation

Headquarters, Europa

SpringCard
13 voie la Cardon
Parc Gutenberg
91120 Palaiseau
FRANCE

Phone : +33 (0) 164 53 20 10
Fax : +33 (0) 164 53 20 18

Americas

SpringCard
964 Fifth Avenue
Suite 235
San Diego, CA 92101
USA

Phone : +1 (619) 544 1450
Fax : +1 (619) 573 6867

www.springcard.com

DOCUMENT INFORMATION

Category : Manual
Group : Products
Reference : PMI8F1P
Version : AB
Status : APPROVED

Keywords :

Abstract :

REVISION HISTORY

Ver.	Date	Author	Valid. by Tech. Qual.	Approv. by	Remarks :
AA	08/05/14	JDA	JDA	JDA	Initial version
AB	09/05/12	LSU		LSU	SpringCard release

TABLE OF CONTENT

1.	INTRODUCTION	4
1.1.	COVERED PRODUCTS	4
1.2.	ALTERNATE OPERATING SYSTEMS	4
1.3.	WHERE CAN I FIND THE SOFTWARE ?	5
2.	USB DRIVER INSTALLATION	6
2.1.	READ ME FIRST	6
2.2.	RUN SDD100 SETUP WIZARD	6
3.	CONNECT THE DEVICE ON THE COMPUTER	9
3.1.	FIRST CONNECTION ON THE COMPUTER	9
3.2.	VERIFY DRIVER INSTALLATION	10
3.3.	TEST DEVICE COMMUNICATION.....	11
3.4.	TROUBLESHOOTING	12

1. INTRODUCTION

This manual explains how to install SpringCard USB driver for CSB4-U, and compliant devices.

USB driver is shipped in a software package, referenced SDD100, together with a diagnostic application.

1.1. COVERED PRODUCTS

SpringCard CSB4-U is an USB contactless reader/writer. Its core is the SpringCard K531 contactless module. A dedicated FTDI chip implements the USB-to-serial functionality.

This manual also covers all SpringCard products using the same FTDI chip, namely :

- **SpringCard CSB5-U** : USB contactless reader/writer with embedded smartcards and SIM/SAM readers, and optional biometric (fingerprint) capabilities,
- **SpringCard INT-USB-TLL and INT-USB-ITL** : interfaces for K531 and K632 modules, IWM-K531 and IWM-K632 proximity readers, and more.

This USB driver targets **Microsoft Windows 2000/XP/Vista** only.

1.2. ALTERNATE OPERATING SYSTEMS

On most operating systems, developers can use the K531 SDK to build applications for the CSB or other K531-based products.

Generally speaking, the FTDI chip will be seen as a Virtual Communication Port (VCP), and the SpringCard product will be accessed through serial communication.

Please refer to K531 development related documentations for more information.

Linux : kernel 2.6 includes the driver for the FTDI chip. SpringCard products using this chip are seen as a VCP, with the name `/dev/ttyUSBxx`. Developers can use the K531 SDK to build applications using the CSB4-U through this channel.

FTDI provides also drivers for **Windows CE** and **Mac OS**.

 
VCP page on FTDI's web site :

<http://www.ftdichip.com/Drivers/VCP.htm>

1.3. WHERE CAN I FIND THE SOFTWARE ?

The **CSB4 USB driver** is available online at :

<http://www.springcard.com/download/csb4.html>

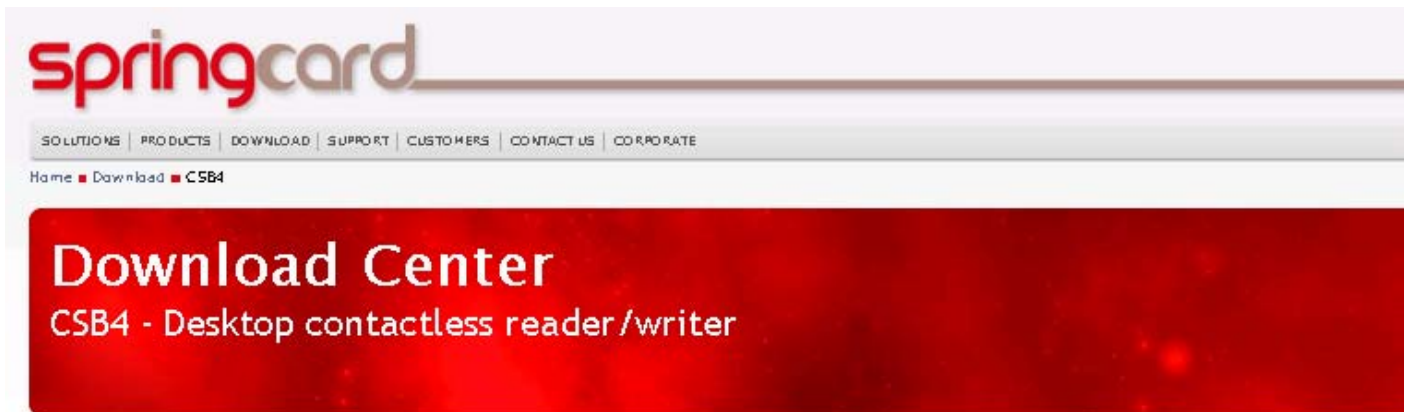

Datasheets and product information

File name	Target	Version	Date	Size
CSB4, K531, K632 : Firmware upgrade procedure				
fgf984p-aa.pdf		aa	05/03/2009	995 kB
CSB4 product information sheet				
pfl8t6p-ab.pdf		ab	31/10/2008	250 kB

Documents and software for the end-user

File name	Target	Version	Date	Size
CSB4 Family : legacy USB driver installation				
pmi8f1p-aa.pdf		aa	13/11/2008	964 kB
CSB4 Family : Legacy USB driver				
Windows serial comm port driver (compliant with SpringProx API) for CSB-4U, CSB-5U, IWM-K531-SU, IWM-K632-SU, K531-PRN, and USB interface for K531-TTL				
sdd100-bc.exe	Windows	bc	13/12/2008	1598 kB
<i>NOTE : This is only a re-packaging of FTDI's Combined Driver Model (CDM v2) with SpringCard's product IDs</i>				
QuickStart for CSB classic and legacy				

Download the file labelled "CSB4 Family : Legacy USB driver" (sdd100).

2. USB DRIVER INSTALLATION

2.1. READ ME FIRST

Please read following warning before connecting the CSB4-U (or compliant product) to your computer :



Do not connect the device now !

The USB driver must be installed before connecting the device to your computer.

Connecting the device before actual driver installation may lead to a bogus configuration, as Windows may download and install automatically a signed driver, instead of using the expected one.



Disconnect Windows XP SP 1 from the Internet during this procedure

Some users have been experiencing problems installing this driver under Windows XP with Service Pack 1.

This is due to Windows XP Update trying to automatically install a certified replacement driver, instead of the SpringCard provided driver.

This problem can be overcome by temporarily disconnecting from the Internet while installing the driver and when connecting the device to the computer for the first time.

Tip : don't forget to download the driver before disconnecting from the Internet.



Use a direct USB connection


When you will connect the device to your computer for the first time, plug it directly into an USB port of the computer.

Do not connect it through any kind of USB hub or other adapter.


2.2. RUN SDD100 SETUP WIZARD

- Log-on to your computer with administrative privileges (Administrator account).
- Run the downloaded installation program.

Vista

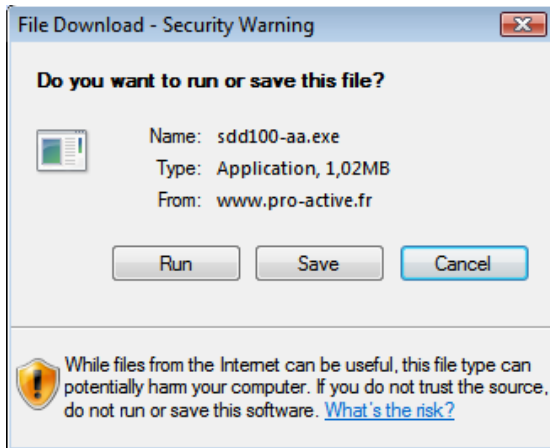


XP

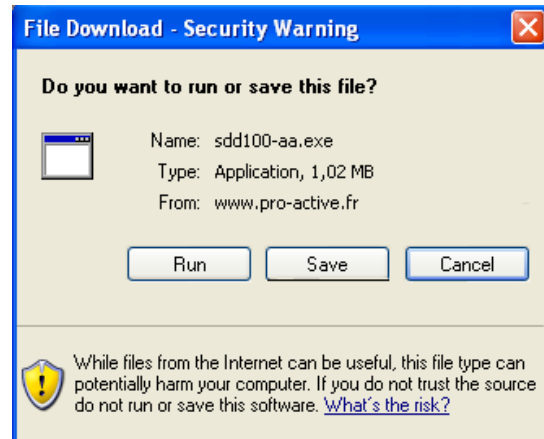


- If prompted by a security warning (see below), please accept driver installation anyway by clicking on "Run".

This warning appears only because the package is not digitally signed.

 Vista

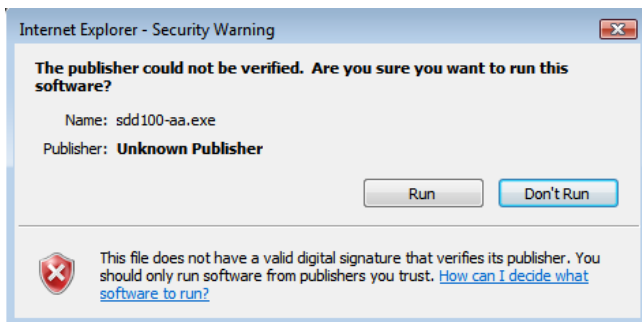


XP

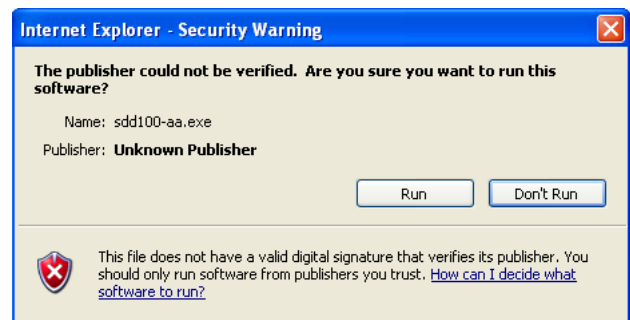 

- **Vista** : the User Account Control system asks you to confirm you want to run the program. Click "Allow".

 Vista

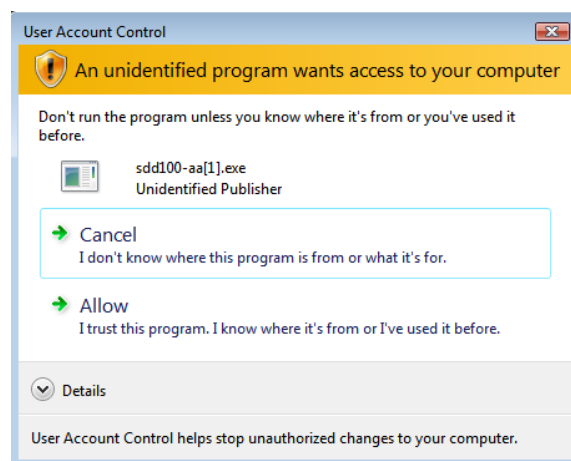


Now follow the installation program, clicking “Next” at each step.

- Depending on your security settings, you may be asked twice to confirm driver installation (see below). Please accept driver installation by clicking “Install anyway” or “Continue anyway”.

This warning appears only because Microsoft WHQL has not signed the installation package, but the FTDI driver it contains is actually WHQL-certified.

 Vista

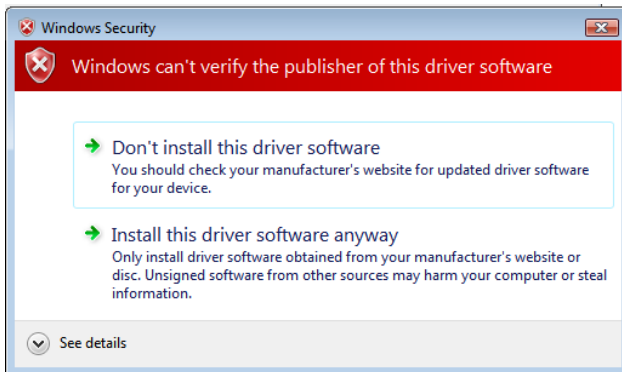


XP



- Once the driver has been successfully installed, click “Finish” in the last screen.

3. CONNECT THE DEVICE ON THE COMPUTER

3.1. FIRST CONNECTION ON THE COMPUTER

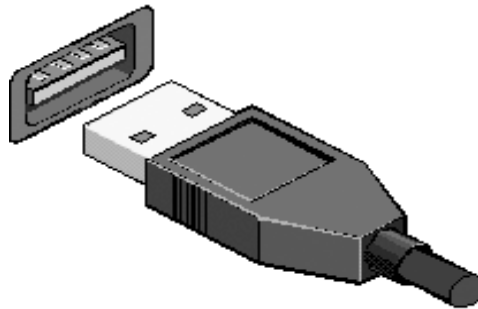

- Plug the CSB4-U connector into a free USB port.
- In most cases, Windows will automatically activate the device. Sometimes, the "Found new hardware wizard" will be launched instead. Please follow the procedure below, depending on the operating system version :

3.1.1. Windows 2000

 
If prompted by the "Found new hardware wizard",

- Select "Search for a suitable driver for my device",
- Check the "Specify a location" box,
- When the prompted "Copy manufacturer's files from", browse to the driver installation directory (namely C:\Program Files\SpringCard\SDD100),
- Confirm your choice,
- The device is now ready for use.

3.1.2. Windows Vista and Windows XP

If prompted by the "Found new hardware wizard",

- If prompted for connection to Windows Update, select "Do not connect to Windows Update this time",
- Select "Install from a list or specific location",
- Select "Search the best driver in the locations", check the "include this location in the search" box, and browse to the driver installation directory (namely C:\Program Files\SpringCard\SDD100),
- If prompted, please accept driver installation by clicking "Install anyway" or "Continue anyway" :

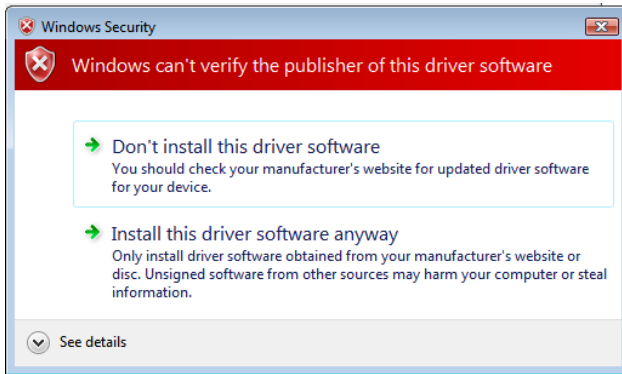 Vista XP

- The device is now ready for use.

3.2. VERIFY DRIVER INSTALLATION

3.2.1. Windows Vista

 
- In the "Start menu", click on "Control Panel"
- Click on "Device manager"
- You will be prompted by User Account Control ; click on "Continue"
- In the menu, check that the selected View is "Device by connection".
- In "PCI bus" section, look for a "SpringCard CSB Contactless coupler".
- Check that a serial communication port has been assigned to the product.

3.2.2. Windows XP

- In the "Start menu", select "Settings" – "Control Panel"
- Click on "System"
- Choose "Hardware"
- Click on "Device Manager".
- In "Ports (COM & LPT)", look for a "SpringCard CSB Contactless coupler".

3.3. TEST DEVICE COMMUNICATION

- In the “Start menu”, select “SpringCard” – “SDD100” – “CSBDiag”
- Alternatively, you may launch CSBDiag.exe located in folder C:\Program Files\SpringCard\Drivers\SDD100

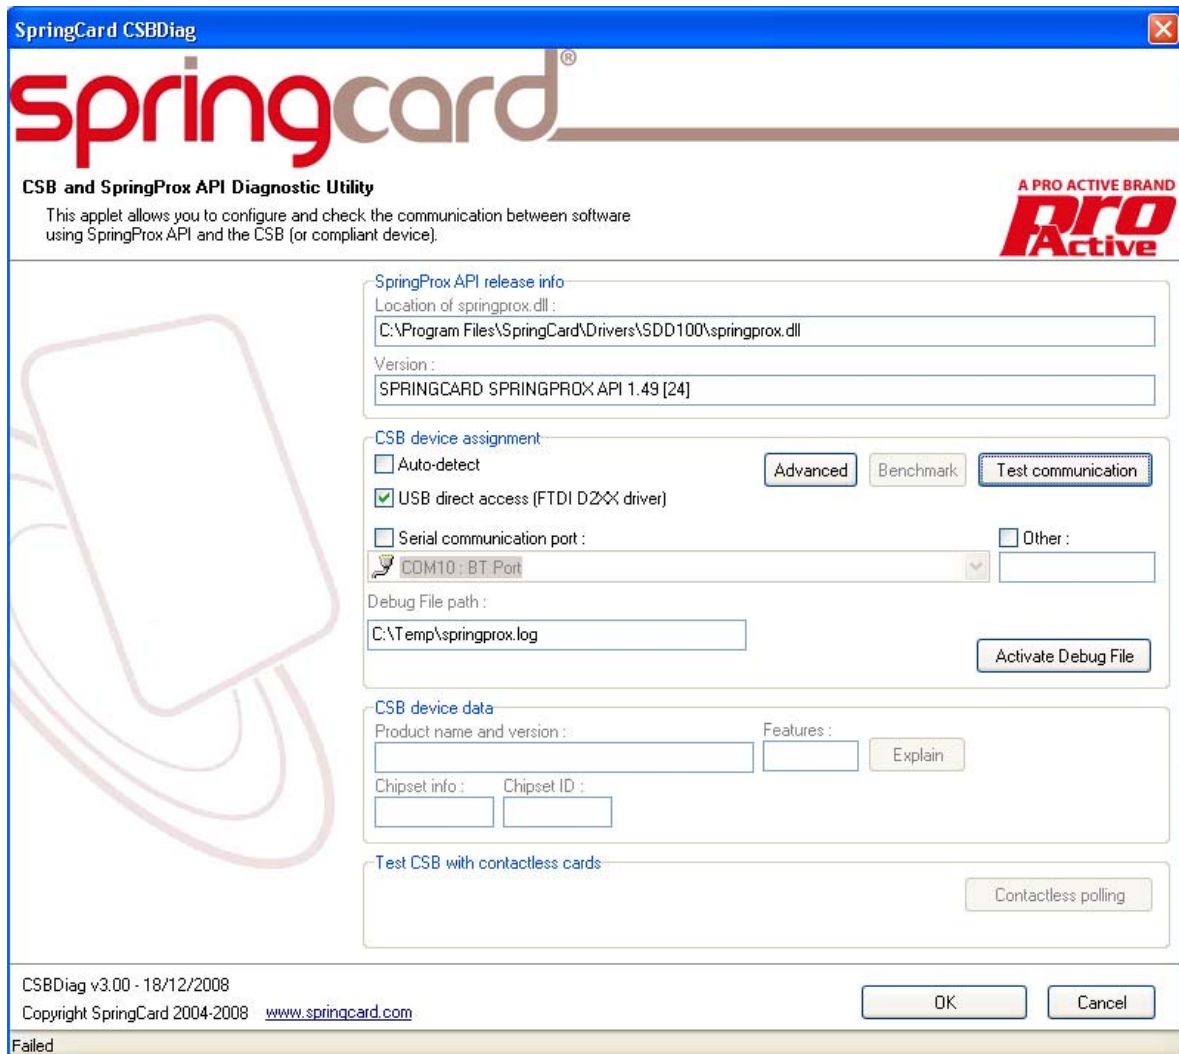

- Check “USB direct access (FTDI D2XX driver)” and click “Test communication”. If successful, skip next step.
- If the first test failed, check “Serial communication port”, and choose the appropriate COM port (as identified in device manager, see § 3.2). Click “test communication”.
- Once connected, click “Contactless polling”. Put one ISO 14443 compliant card (A or B) on the reader to verify that the card is detected properly.
- Terminate the program by clicking “OK”.

3.4. TROUBLESHOOTING

If the test described in § 3.3 is unsuccessful, please observe the following procedure :

- Un-plug the CSB, restart the computer, plug the CSB, and perform the test again,
- Un-plug the CSB, uninstall the driver (“Control panel” – “Add remove program”), install the driver again, and restart the computer before doing the test again.

If still unsuccessful,

- Launch “Device manager”, locate the device entry in the tree,
- Right-click on the device and click “Properties”,
- Choose “Driver update” or “Change driver” in the “Driver” tab of the dialog box,
- Force a manual installation of the driver from the installation folder :
- C:\Program Files\SpringCard\Drivers\SDD100

DISCLAIMER

This document is provided for informational purposes only and shall not be construed as a commercial offer, a license, an advisory, fiduciary or professional relationship between PRO ACTIVE and you. No information provided in this document shall be considered a substitute for your independent investigation.

The information provided in document may be related to products or services that are not available in your country.

This document is provided "as is" and without warranty of any kind to the extent allowed by the applicable law. While PRO ACTIVE will use reasonable efforts to provide reliable information, we don't warrant that this document is free of inaccuracies, errors and/or omissions, or that its content is appropriate for your particular use or up to date. PRO ACTIVE reserves the right to change the information at any time without notice.

PRO ACTIVE does not warrant any results derived from the use of the products described in this document. PRO ACTIVE will not be liable for any indirect, consequential or incidental damages, including but not limited to lost profits or revenues, business interruption, loss of data arising out of or in connection with the use, inability to use or reliance on any product (either hardware or software) described in this document.

These products are not designed for use in life support appliances, devices, or systems where malfunction of these product may result in personal injury. PRO ACTIVE customers using or selling these products for use in such applications do so on their own risk and agree to fully indemnify PRO ACTIVE for any damages resulting from such improper use or sale.

COPYRIGHT NOTICE

All information in this document is either public information or is the intellectual property of PRO ACTIVE and/or its suppliers or partners.

You are free to view and print this document for your own use only. Those rights granted to you constitute a license and not a transfer of title : you may not remove this copyright notice nor the proprietary notices contained in this documents, and you are not allowed to publish or reproduce this document, either on the web or by any mean, without written permission of PRO ACTIVE.

Copyright © PRO ACTIVE SAS 0000, all rights reserved.

EDITOR'S INFORMATION

PRO ACTIVE SAS company with a capital of 227 000 €
RCS EVRY B 429 665 482
Parc Gutenberg, 13 voie La Cardon
91120 Palaiseau – France