

How to upgrade your DualRunners ?

Using BaracodaManager software (v3.36.2min), you can upgrade the scanner embedded firmware.

1. First, upgrade the Baracoda CPU version by using the “.BWT” file.

Once the upgrade process is done, read the reset barcode(s):

For DualRunners (1D) : BDR-L or BDR-LA



Reset factory defaults

For DualRunners (2D) : BDR-Fs



Reset factory defaults

And



Reset decoder factory defaults (for fw \geq v1.48)

2. Then upgrade the RFID card version by using the “.mot” file.

Notes : Do not forget to reload the Mifare keys after the RFID decoder upgrade.

Feel free to contact us if you have any question: support@baracoda.com