

# FUNKYGATE SPECIAL INSTRUCTIONS

## GETTING AND USING A FUNKYGATE

***Congratulations upon your selection of a SpringCard's FunkyGate and welcome to SpringCard's customers community!***



You must be aware that all FunkyGates are to be used indoors or outdoors with a shelter.

Nevertheless, you are free to use them outdoors without a shelter, except those which are POE -FunkyGate-IP+POE PC/SC, FunkyGate-IP+POE NFC . But SpringCard's responsibility can not be engaged if you use a FunkyGate this way.

Further details and technical information can be found on our website  
<https://www.springcard.com/en/products/access-control>



## PUTTING A SILICONE SEAL

- Separate the two parts of the FunkyGate shell
- Put a silicone seal at the back of the front part as shown on the opposite photo in accordance with professional standards (temperature of application, drying time, etc.)
- Reassemble the parts of the FunkyGate shell
- Install it carefully on a wall

## FOR MORE INFORMATION, FEEL FREE TO CONTACT US!

US Contact - email : [samson.a@springcard.com](mailto:samson.a@springcard.com) - skype: samson.a\_5  
You are also welcome to visit our website: <https://www.springcard.com>