





The device is a slave reader/writer - Host software typically uses the SpringProx API

PC/SC The device

The device is a slave reader/writer -Host software uses the PC/SC standard stack

Standalone

The device is a reader only - It operates even without host software



Master cards

The device can be configured on-the-field through master cards



USB

The device has a native USB interface



Serial

The device has a serial interface (RS-TTL or RS-232)



PNA83RP-AB

Contactless family - Product definition matrix

Information in this document is subject to change without notice. Copyright © PRO ACTIVE SAS 2008, all rights reserved. Reproduction without written permission of PRO ACTIVE is forbidden. SPRINGCARD, PRO ACTIVE, and both logos are registered trademarks of PRO ACTIVE SAS.

PRO ACTIVE company with a capital of 227 000 €
R.C.S. EVRY B 429 665 482
N.A.F. 722 C
VAT #: FR 27 429 665 482
France

All other trademarks are property of their respective owners.