

SpringCard

ProxRunner

ISO 14443 (A&B, T=CL) & ISO 15693 & ISO 18000-3
Wireless Bluetooth RFID scanner




Agenda

- Product overview
- Demonstration
- Appendix

Product overview



ProxRunner assets

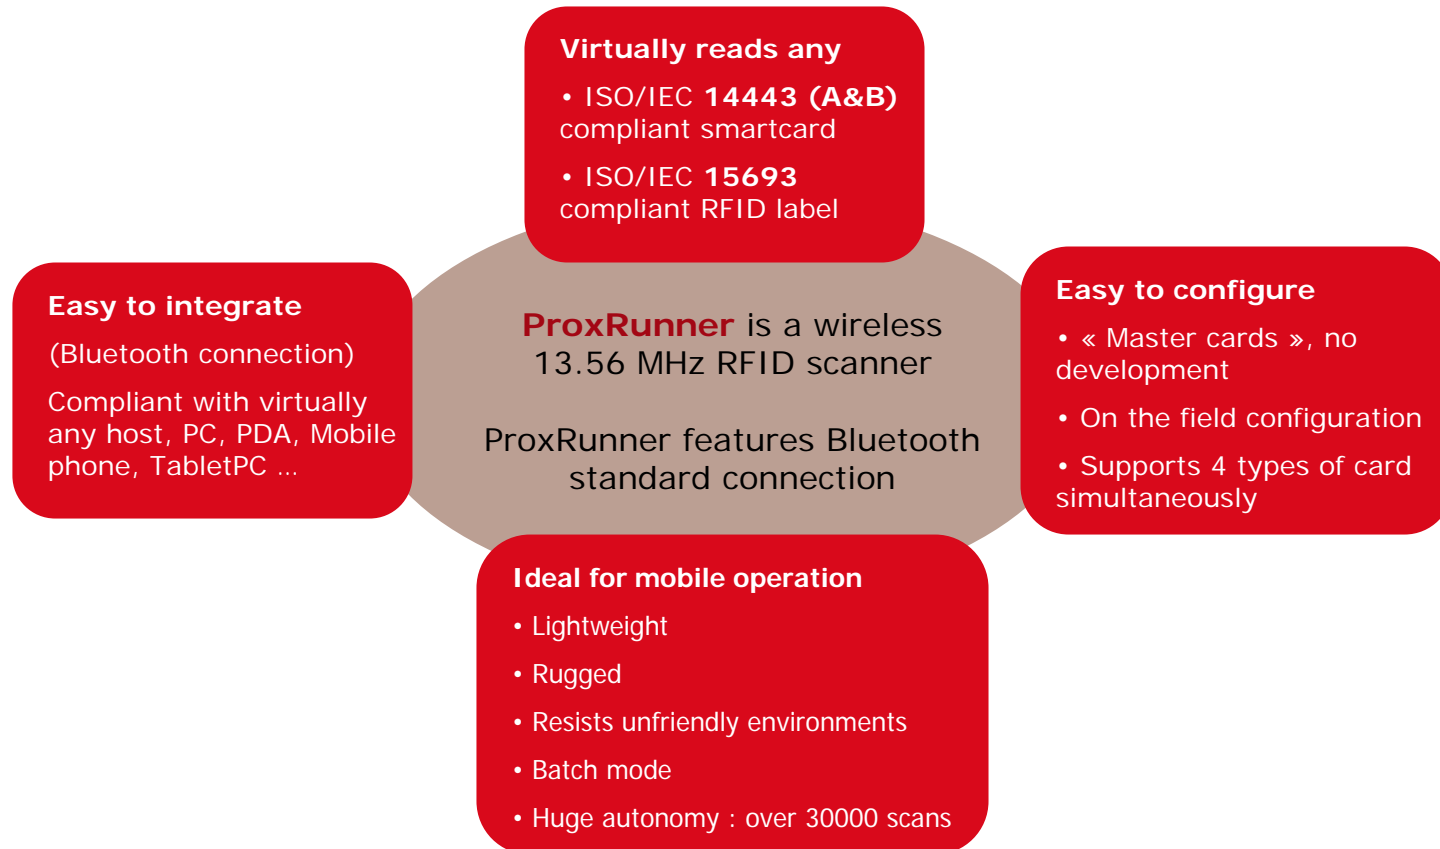

ProxRunner functionalities



Examples of application

- Loyalty, user identification and tracking
- RFID or asset tracking, logistics
- RFID asset management : books, medicines or other valuables

Serial number

- ISO/IEC 14443 contactless smartcard
- ISO/IEC 15693 RFID tag, card

Data from


- Memory card (Mifare, ICODE or other)
- T=CL smartcard file

Reading in a secure session

- Desfire card (DES/3DES authentication and ciphering)



Two modes : Real-time and batch modes

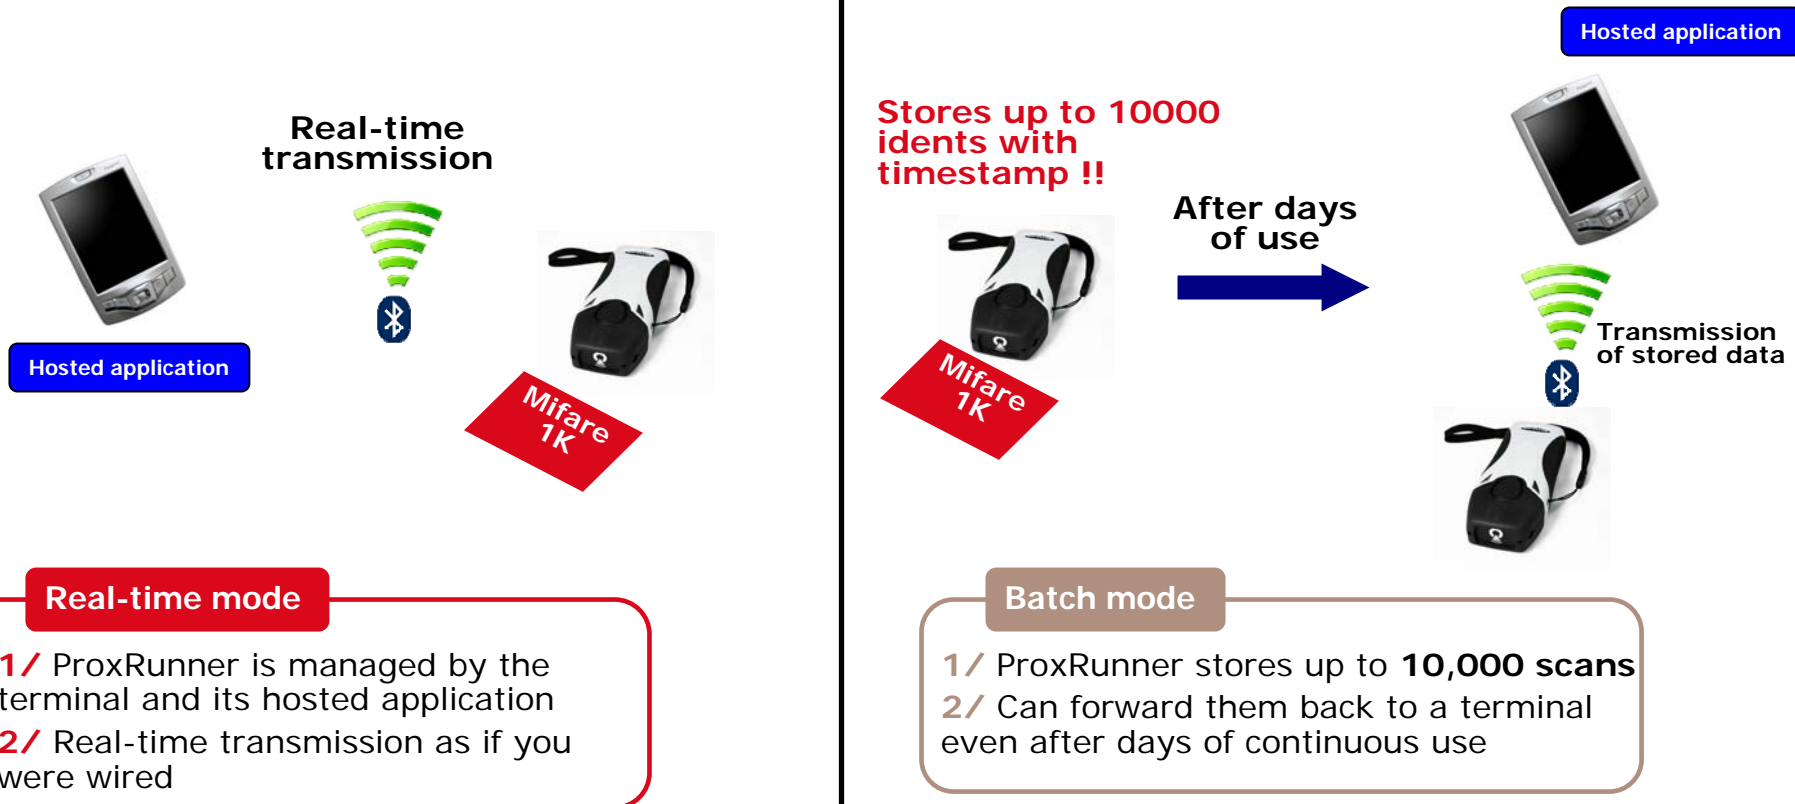

Product scope



ProxRunner

Operating distance (card/tag to ProxRunner) : 0 to 4 cm
Battery autonomy : 30,000 scans

- Is a wireless 13.56 MHz RFID scanner
- Features **Bluetooth 1.2 standard connection, Gap & SPP profiles**
- **Supports baud rate 106 kbps for ISO/IEC 14443 cards**
- **Supports baud rate 26 kbps for ISO/IEC 15693 RFID tags or cards**
- Handles **any ISO/IEC 14443 (type A, B and B')** and **ISO/IEC 15693 and ISO/IEC 18000-3** compliant smartcards and tags

Supported contactless cards

- **NXP** (formerly *Philips Semiconductors*): Mifare Classic & UltraLight, Desfire, ProX, SmartMX
- **Infineon SLE66 family**
- **ST MicroElectronics SR, SRI, SRIX families**
- **ASK CTS256/CTS512**
- **Inside PicoTag and HID iClass (serial number only)**
- **Calypso (CD97, CD21, GTML...)**

And virtually any ISO/IEC 14443 A or B compliant smartcard

Supported RFID tags and labels

- **NXP ICODE1, ICODE-SLI**
- **Texas Instrument TagIT**
- **STMicroelectronics LRI**
- **AND MORE**

How to use it?



Procedure

- 1/ Make sure your terminal is Bluetooth enabled. If not, install a Bluetooth adapter
- 2/ Register as a new partner at : www.baracoda.com/baracoda/formulaire/index.php
- 3/ According to the "Compatibility Table" in the menu "Technical support" of your account, install either BaracodaManager or KEmul
- 4/ Turn on ProxRunner and configure either BaracodaManager or KEmul using the *ProxRunner QuickStart Guide** downloadable on our website

Your ProxRunner device is ready-to-use.
You can present the card you want to read to the scanner after opening any text editor!!!

* Free download link :

<http://www.springcard.com/download/proxrunner.html>

Example : How to read a name?



Example1

- Card type : Mifare
- Target data location : sector 1 block 0
- Size : 16 bytes
- AZERTY keyboard



User 2:
« Lysa »



User 1:
« Mary »

Example2

- Card type : Desfire 4k
- Target data location : XXXXX
- Size : 16 bytes
- AZERTY Keyboard

Creating master card : Reading user names on Mifare and Desfire 4k cards

Master card configuration

The Desfire 4k is now configured
as a master card !!!



Desfire 4k

Ex : Prox'N'Roll PCSC
Reader/writer

Configuration
information

Master card with
config info

Config info

For Mifare cards :

- Target data location : sector 1, block 0
- Size : 16 bytes
- AZERTY keyboard

For Desfire 4k cards :

- Target data location : XXXXX
- Size : 16 bytes
- AZERTY Keyboard

Download and install configuration tool on the page :
<http://www.springcard.com/download/proxrunner.html>

ProxRunner RFID scanner configuration

Configuring ProxRunner RFID scanner

Reader is configured and reads names in Mifare and Desfire 4k cards



ProxRunner supports 4 different templates!!



Demo time!

Contact us

SpringCard

HEADQUARTERS, EUROPE

13 voie la Cardon
Parc Gutenberg
91120 Palaiseau
France

Phone : +33 (0) 164 53 20 10
Fax : +33 (0) 164 53 20 18

SpringCard

AMERICAS

964 Fifth Avenue
Suite 235
San Diego, CA 92101
USA

Phone : +1 (619) 544 1450
Fax : +1 (619) 573 6867



DISCLAIMER

This document is provided for informational purposes only and shall not be construed as a commercial offer, a license, an advisory, fiduciary or professional relationship between Pro-Active and you. No information provided in this document shall be considered a substitute for your independent investigation.

The information provided in document may be related to products or services that are not available in your country.

This document is provided "as is" and without warranty of any kind to the extent allowed by the applicable law. While PRO ACTIVE will use reasonable efforts to provide reliable information, we don't warrant that this document is free of inaccuracies, errors and/or omissions, or that its content is appropriate for your particular use or up to date. PRO ACTIVE reserves the right to change the information at any time without notice.

PRO ACTIVE does not warrant any results derived from the use of the products described in this document. PRO ACTIVE will not be liable for any indirect, consequential or incidental damages, including but not limited to lost profits or revenues, business interruption, loss of data arising out of or in connection with the use, inability to use or reliance on any product (either hardware or software) described in this document.

These products are not designed for use in life support appliances, devices, or systems where malfunction of these product may result in personal injury. PRO ACTIVE customers using or selling these products for use in such applications do so on their own risk and agree to fully indemnify PRO ACTIVE for any damages resulting from such improper use or sale.

COPYRIGHT NOTICE

SPRINGCARD, the SPRINGCARD logo, PRO ACTIVE and the PRO ACTIVE logo are registered trademarks of PRO ACTIVE SAS.

All other trademarks are property of their respective owners.

Information in this document is subject to change without notice. Reproduction without written permission of PRO ACTIVE is forbidden.

All information in this document is either public information or is the intellectual property of PRO ACTIVE and/or its suppliers or partners.

You are free to view and print this document for your own use only. Those rights granted to you constitute a license and not a transfer of title : you may not remove this copyright notice nor the proprietary notices contained in this documents, and you are not allowed to publish or reproduce this document, either on the web or by any mean, without written permission of PRO ACTIVE.

Copyright © PRO ACTIVE SAS 2008, all rights reserved.

EDITOR'S INFORMATION

Published by **PRO ACTIVE SAS** company with a capital of 227 000 €

RCS EVRY B 429 665 482

NAF 722C

VAT# : FR 27 429 665 482