springcard

FUNKYGATE-SU

WALL-MOUNTED RFID & CONTACTLESS READER

FunkyGate contactless reader is the new generation reader for highly secured access control systems. Key points are **security**, **interoperability** and **evolutivity**.



Interoperability: *FunkyGate* is not only able to read serial numbers from virtually any 13.56MHz contactless card, but it is also able to fetch particular data from Mifare or advanced T=CL cards. Thanks to its fully configurable output format, *FunkyGate* integrates itself in any access-control system.

Evolutivity: FunkyGate configuration is made of 4 different sets, thus allowing different kind of cards to be used at the same time on the site, making it possible to rotate authentication keys periodically leads to improved security.

Security: FunkyGate is able to communicate with NXP DESFire, to verify a numeric signature and to diversicate authentication keys for top-of-art security levels. *FunkyGate* is equipped with an anti-tamper facility: 2 magnet sensors positioned respectively on the reader's back-face and front-face prevent removal or opening.

SPRINGCARD & PRO ACTIVE

Established in 2000, **Pro Active** is an innovative provider of smartcard-related solutions, and one of the leaders on the contactless-reader market.


SpringCard distributes **Pro Active**'s contact and contactless products worldwide under a single brand name.


FEW TYPICAL APPLICATIONS

- high secured buildings access controll
- cash or vending machine

DETAILED VIEWS



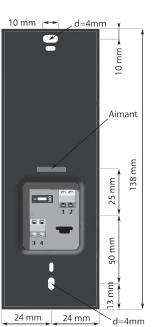

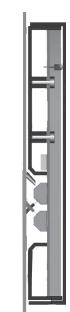

PIN Assignements		
	RS-232	USB
1	12 V power supply	Unconnected
2	GND	Unconnected
3	TX (reader to host)	Unconnected
4	RX (host to reader)	Unconnected
J3	Unconnected	USB (to host)

HEADQUARTERS, EUROPESPRINGCARD

13 voie la Cardon Parc Gutenberg 91120 Palaiseau FRANCE

Phone: +33 (0) 164 53 20 10 sales@springcard.com

Americas SPRINGCARD

6161 El Cajon Blvd Suite B, PMB 437 San Diego, CA 92115 USA

Phone: +1 (713) 261 6746 sales-usa@springcard.com

www.springcard.com





FUNKYGATE-SU

WALL-MOUNTED RFID & CONTACTLESS READER



TECHNICAL SPECIFICATIONS

Contactless smartcard interface	
Standards	ISO/IEC 14443 A and B, T=CL ISO/IEC 15693 and 18000-3
RFID carrier	13.56 MHz
Operating distance	up to 6 cm depending on card and on environment
Card baud rate	106 kps (ISO 14443) 26 kbps (ISO 15693)

Supported cards (partial list):

- NXP (Philips) ICODE1, ICODE-SLI, ...
- Texas Instrument TagIT
- NXP (Philips) MIFARE Classic & UltraLight
- NXP (Philips) DESFIRE, SmartMX, ProX
- Infineon SLE66 family
- ST MicroElectronics SR, SRI, SRIX families
- HID iClass, Inside PicoTag
- ASK CTS256/CTS512
- Calypso (CD97, CD21, GTML...)¹

And virtually any ISO/IEC 14443 A or B compliant smartcard, or ISO/IEC 15693 compliant RFID label

Hardware specifications	
Dimensions (LxWxH)	159 x 57 x 29 mm (approx)
Housing material	ABS-94HB + PC
Color	Black
Weight	≈ 180g

Environment and safety	
Operating temperature	-20 →+80°C
Storage temperature	-40 →+85°C
MTBF	500 000 hours
CE mark	EN50082 / EN55022 class B
Other standards	RoHS

Security and configuration	
Field configuration through master cards or by the communication line	
Anti-tamper facility 2 magnet sensors: - on the back-side to stop removing - on the front-side to stop opening	

RS232 mode ²		
3-wire RS-232 serial communication RX/TX at +12/-12V		
Distance to computer	max 3m	
Baud rate	1200, 2400, 4800, 9600, 19200, 38400	
Output format	Hexadecimal string, 4 to 16 bytes (8 to 32 chars)	
LEDs and buzzer	Driven by short commands	
External Power	12V DC - linear supply recommended - 9 → 30 V	
Consumption	80mA average - 200mA peak	

USB mode ²	
USB1.1 virtual serial communication port	
Type B connector at the back of the reader	
max 2.5m	
Bus powered (≈250mA under 5V)	
Windows, Windows CE, Linux	
100 mA average - 250 mA peak	
Usb electric intensity average 4mA if external power used	
Same as RS-232 mode	

¹ Calypso card operation is subject to an extra license fee. Contact us for information.

ORDER CODES

PART #	Description
IWMX-10-SU	FunkyGate-SU wall mounted contactless reader
	RS232/USB

PRECAUTIONS FOR INSTALLATION

This device is a contactless reader; it uses inductive coupling (magnetic field) to power the cards and communicate with them. Precaution must be taken to keep the reader far from any source of perturbation (e.g. other readers, computers...). Installing the reader near a metal surface (aluminium or steel plate...) will lead to shorter operating distance and increased power consumption.

SpringCard has a long experience installing contactless couplers in various kind of devices. Do not hesitate to contact us if you need any assistance.

Information in this document is subject to change without notice.

Copyright © PRO ACTIVE SAS 2010, all rights reserved.
Reproduction without written permission of PRO ACTIVE is forbidden.
SPRINGCARD, PRO ACTIVE, and both logos are registered trademarks of PRO ACTIVE SAS.
All other trademarks are property of their respective owners.

PRO ACTIVE company with a capital of 227 000 € R.C.S. EVRY B 429 665 482 N.A.F. 722 C VAT #: FR 27 429 665 482 France





 $^{^2}$ Output format, baud rates and related transmission options are fully configurable through serial or USB connection, or using master cards